

HOW THEY OPERATE

Inflatable lifejackets have an inflation valve either automatic or manual connected to an airtight bladder. To operate the manual valve you simply pull the toggle on the right hand side of the jacket downwards with a jerk and the bladder will start to inflate immediately. The automatic lifejacket will operate and inflate once it has been immersed in the water for three seconds. The automatic can be operated manually and both types can be inflated orally by the tube. The oral tube is used to deflate the lifejacket. N.B! After gas inflation the lifejacket must be rearmed. Inside the lifejacket you will find instructions as to which rearming kit to use (see also page 44 and 45). Instructions to complete the rearming procedure are included with our rearming kits.



Closing



Stainless steel Buckle
Harness Type



Plastic Buckle
Waistbelt Type

Standard mechanisms



United Moulders standard
mechanism MKS



Halkey Roberts
mechanism

Clear indicator mechanisms



United Moulders Clear
Indicator CXI mechanism



United Moulders
Pro Sensor/Elite

Auto "bobbins"



United Moulders
all weather cartridge



Halkey Roberts
auto bobbin

Hydrostatic mechanism



Hammer hydrostatic
inflator MA1 "auto"

See www.cmhammar.com